



2110 Gilbert Av, St. Paul, MN 55104

651-644-0005

Roaster Oven



Roaster provides a portable means of roasting or cooking food.

1. Roaster oven will require a 2-cup minimum of water. Using wet will keep food moister.
2. Place on level, sturdy surface.
3. Roaster gets HOT! Use hot pads.
4. Check for live outlet.
5. DO NOT use long extension cord or generator-may surge and burn up.
6. Keep out of reach of children.
7. Rinse/food free before returning.
8. DO NOT immerse in water.
9. Use caution when moving appliance containing hot liquid.

Dimensions: 26 x 18.x 12"

Electrical: Do not run on long extension cord or generator, machine may surge and burn up. UL Listed for household use 2 prong plug, 1440 Watts

Color: N/A

Transporting: 1 can be transported in the rear of car.

Misc:

Add ons: serving pieces, ladles, tongs, spoons (regular & slotted)

Vendor / R.I.D.: 054-0016